

INSTALLATION OVERVIEW

201-EBT-21B




This installation overview is not a substitute for reading the product manuals

PP-003-0057-AU REV A

WHAT'S INCLUDED



1 x **201-219-21** - Gauge and mounting bracket

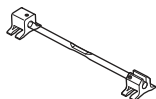


1 x **223-SK** - Epoxy strain sensor installation kit

APPLICATION

Straight Truck: Dual Spring Steer and Air Drive Suspension

Sensor Location:

The strain sensors “A” and “B” should be located on the top, center of each steer axle with sensor “A” being the front axle. The air sensor should be connected directly to an air bag on the drive axle group. See 223-SK manual for more information on how to install the strain and air sensors.

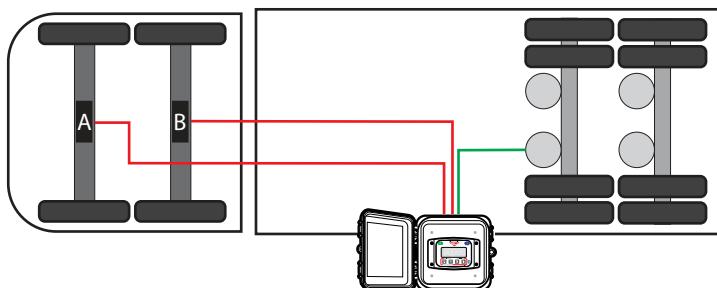

Mode:

Set the gauge to F2B1 mode - Separates weight into front axle group (steer) and back axle group (drive). *This is the only mode on this gauge and will be already set to this.*

CONTACT US!

Smart Truck Solutions
+61 418 622840
rightweigh.com.au
support@rwls.com

Follow Us!

