INSTALLATION OVERVIEW 201-EBT-20B



This installation overview is not a substitute for reading the product manuals

WHAT'S INCLUDED



1 x 201-217-30 - Gauge and mounting bracket



2 x 218-SK - Weld strain sensor installation kit



Scan here to see additional resources on ou website including full installation manuals, quick set up guides, and video tutorials!

SENSOR CONFIGURATION




The gauge should be set to detect 2 Spring Sensors. See Spring Suspension Gauge manual for more information on how to set the sensor configuration.


APPLICATIONS

Trailer Axle Group: Tandem Axle

Sensor Location:

The gauge should be mounted and installed on the trailer and the strain sensors should be mounted on the top, center of each trailer axle with sensor "A" mounted on the front axle. See 218-SK manual for more information on how to install the strain sensors.

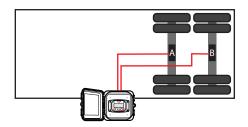

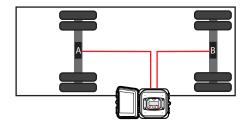

Mode:

Set the gauge to Average (AVG) mode to see a single weight for the axle group. Set the gauge to Independent (IDP) mode to see separate weights for each axle. See Spring Suspension Gauge manual for information on how to set the mode.

CONTACT US!

Right Weigh, Inc. (888) 818-2058

www.rwls.com

support@rwls.com

Follow Us!







