

INSTALLATION OVERVIEW

201-EBT-10B



This installation overview is not a substitute for reading the product manuals

WHAT'S INCLUDED



1 x 201-217-10 - Gauge and mounting bracket



1 x 218-SK - Weld strain sensor installation kit



Scan here to see additional resources on our website including full installation manuals, quick set up guides, and video tutorials!

SENSOR CONFIGURATION




The gauge should be set to detect 1 Spring Sensor. See *Spring Suspension Gauge manual* for more information on how to set the sensor configuration.

APPLICATIONS

Single Axle Trailer

Sensor Location:


The strain sensor should be located on the top, center of the axle. See 218-SK manual for more information on how to install the sensor.

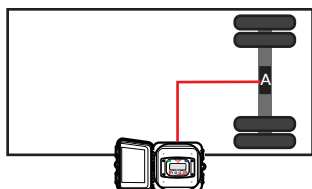

Single Point Trailer Axle

Sensor Location:


The strain sensor should be located on the top, center of the trunnion tube. See 218-SK manual for more information on how to install the sensor.

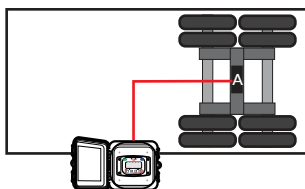

Straight Truck with Trunnion Tube

Sensor Location:

The strain sensor should be located on the top, center of the trunnion tube. See 218-SK manual for more information on how to install the sensor.

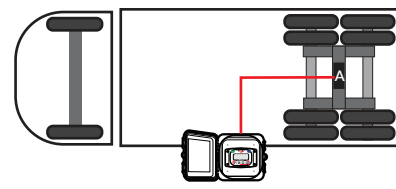

Mode:

Set the gauge to average mode (AVG) - gives average weight of all axles on axle group. See Spring Suspension Gauge manual for information on how to set the mode.

CONTACT US!

Smart Truck Solutions

+61 418 622840

rightweigh.com.au

leigh@rwls.com.au

Follow Us!

