

INSTALLATION OVERVIEW

201-EBT-11B




This installation overview is not a substitute for reading the product manuals

WHAT'S INCLUDED



1 x 201-217-11 - Gauge and mounting bracket

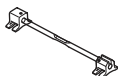

1 x 221-SK - Epoxy strain sensor installation kit



Scan here to see additional resources on our website including full installation manuals, quick set up guides, and video tutorials!

SENSOR CONFIGURATION



The gauge should be set to detect 1 Spring Sensor. See *Air/Spring Suspension Gauge* manual for more information on how to set the sensor configuration.

APPLICATIONS


Straight Truck: Spring Steer and Air Drive Suspension

Sensor Location:

The strain sensor should be located on the top, center of the steer axle. See 221-SK manual for more information on how to install the sensor. The air sensor should be connected directly to an air bag on the drive axle group.

Mode:

Set the gauge to Spring Average Air Average (SA AA) mode - separates weight into the front axle group (steer axle) and the back axle group (drive). See *Air/Spring Suspension Gauge* manual for information on how to set the mode.

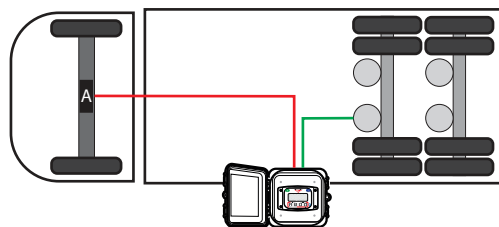

CONTACT US!

Smart Truck Solutions

+61 418 622840

rightweigh.com.au

leigh@rwls.com.au

Follow Us!

